

**Instructions for Projector Use:**

1. Turn projector on. The backlight will flash as the bulb warms up, and the keypad will become inactive.
2. While bulb is warming up, go to the wall panel near room 211S (See Figure) and lower the screen with the arrow keys.
3. Select the appropriate display mode:
  - a. "PC" is linked to Station 12.
  - b. "LAPTOP" is linked to a VGA/Audio cable.
  - c. "VIDEO" is linked to composite video cables.
4. If you wish to mute the display (not the sound), press "MUTE." To unmute, press "MUTE" again.
5. Remember to press the "OFF" button after use; bulbs burn out fairly quickly.



*Figure. Screen Controls*